

## Dexter Axle Maintenance Schedule

ITEM	FUNCTION REQUIRED	WEEKLY	3 MONTHS OR 3,000 MILES	6 MONTHS OR 6,000 MILES	12 MONTHS OR 12,000 MILES
<b>Brakes</b>	Test that they are operational.	At Every Use			
<b>Brake Adjustment</b>	Adjust to proper operating clearance (not required with Nev-R-Adjust® brakes).		X		
<b>Brake Magnets</b>	Inspect for wear and current draw.			X	
<b>Brake Linings</b>	Inspect for wear or contamination				X
<b>Brake Controller</b>	Check for correct amperage and modulation.			X	
<b>Brake Cylinders</b>	Check for leaks, sticking.				X
<b>Brake Lines</b>	Inspect for cracks, leaks, kinks.				X
<b>Trailer Brake Wiring</b>	Inspect wiring for bare spots, fray, etc.				X
<b>Breakaway System</b>	Check battery charge and switch operation.	At Every Use			
<b>Hub/Drum</b>	Inspect for abnormal wear or scoring.				X
<b>Wheel Bearings and Cups</b>	Inspect for corrosion or wear. Clean and repack.				X
<b>Seals</b>	Inspect for leakage. Replace if removed.				X
<b>Springs</b>	Inspect for wear, loss of arch.				X
<b>Suspension Parts</b>	Inspect for bending, loose fasteners and wear.			X	
<b>Suspension Wet Bolts &amp; Equalizers</b>	Grease.		X		
<b>Extreme Duty Bushings</b>	Grease.		X		
<b>Hangers</b>	Inspect welds.				X
<b>Wheel Nuts and Bolts</b>	Tighten to specified torque values.		X		
<b>Wheels</b>	Inspect for cracks, dents, or distortion.			X	
<b>Tire Inflation Pressure</b>	Inflate tires to mfg's specifications.	X			
<b>Tire Condition</b>	Inspect for cuts, wear, bulging, etc.		X		